

USER'S MANUAL "AMERICA" EGG WASHING MACHINE

Technical date:

Power: 220-240 Voltage

Heating: Max 1500 Watt

Certificates: CE

D

DEMCO

Warranty: 1 year from purchase

The Machine:

- A.** The rotating machine is made of galvanized plate. On the bottom part is the electronic motor.

The motor rotates the complete machine.

The machine has an electronic thermostat and heating element on 1500 watts. The temperature is pre-set at 43 Celsius.

- B.** Egg basket. Capacity app. 100 eggs.

How to use:

1. Fill the machine with cold water to app. 10 cm. from the top. Do not use hot or boiling water, due to risk of damaging the thermostat.
2. Turn on the machine by turning the switch to heat (varme). When the control lamp turns of, the water has the correct temperature (43 celsius).

To adjust the temperature, turn the small screw on the side of the machine. It is placed by the switch.

Please note that the thermostat is very sensitive. Turn only a little.

3. When the water is ready add 3 measures of "America Egg Washing Powder".

4. Place the basket with eggs in the water. If possible, try to place the most dirty eggs on the outside in the basket.
5. Turn the switch to heat / motor (varme / motor)
6. It now takes about 5 to 10 minutes to wash the eggs, depending on how dirty the eggs are.

Eggs that are not clean after 15 to 20 minutes should not be washed longer.

7. After the washing is finished, pull the basket up and down a few times.
8. When finish the eggs have to air dry.


The drying can be speeded up by drying in a hot space or by a ventilator.

IMPORTANT, the eggs must air dry, and may not be wiped after washing.

IMPORTANT: Make a new solution with Egg Washing Powder after every 3 to 4 washes.

After use, rinse the machine with clear water.

Switch:

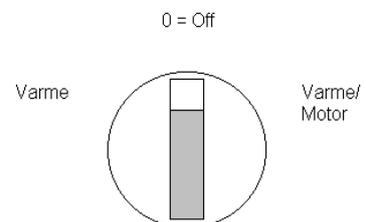

If questions, please contact you local dealer or:

AMERICA A/S - DK-7700 Thisted
Tel.: (+45) 9792 0122
email: post@america-thisted.dk